PREMIER®

MANUAL DE INSTRUCCIONES

ULTRA EXTRACTOR DE JUGOS

ED-5202SJ

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

DESCRIPCIÓN 2
INSTRUCCIONES DE SEGURIDAD 3
ENSAMBLAJE 3
INSTRUCCIONES DE OPERACIÓN 6
DESMONTAJE Y LIMPIEZA 6
ESPECIFICACIONES 6

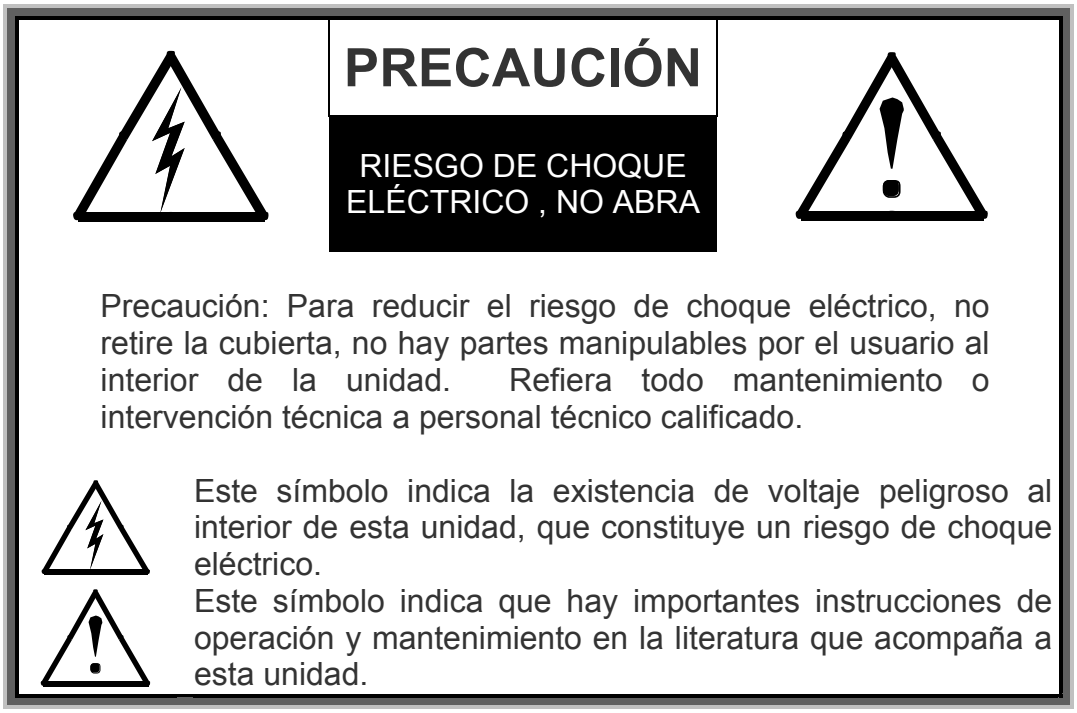
PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

El extractor de jugos es un mecanismo totalmente diferente donde el jugo se obtiene por medio de exprimir en lugar de moler. El extractor de jugos es un nuevo producto capaz de preparar leche de soya, jugo de vegetales, jugo de frutas, etc. El sistema de tecnología de baja velocidad exprime las frutas de tal forma que el jugo mantiene su color, su sabor natural, nutrientes y vitaminas. Para lograr el mejor desempeño con su producto siga estas instrucciones cuidadosamente.

Nota
No utilice el extractor sin colocar primero los alimentos

Importante
El borde de la tolva debe apuntar al signo de “cierre” en la base para que el extractor funcione correctamente.

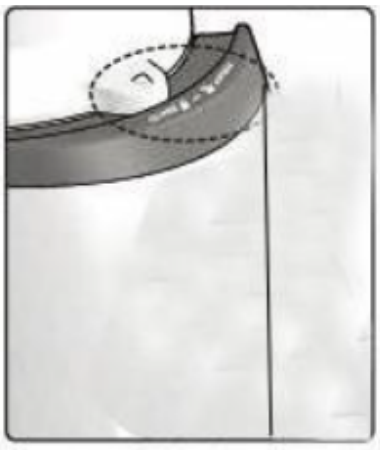

⚠ INSTRUCCIONES DE SEGURIDAD

- Conecte el cable de poder de la unidad a un solo tomacorriente. Es decir, que la conexión no se comparta con otros artículos electrodomésticos.
- Utilice este producto de acuerdo con el manual de instrucciones.
- No sumerja el producto en agua u otros líquidos.
- No permita que los niños jueguen con la unidad.
- No utilice la unidad en lugares con altas temperaturas.
- No introduzca los dedos ni otros utensilios en la unidad para empujar los alimentos.
- No toque las partes móviles mientras utiliza la unidad.
- Desconecte el cable de poder antes de limpiar la unidad.
- Si el cable de poder se daña no utilice la unidad y haga que sea reparado.
- No manipule el cable de poder con las manos mojadas.
- Asegúrese de que el extractor se coloca sobre una superficie plana y estable.
- Mantenga la unidad fuera del alcance de los niños.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

ENSAMBLAJE

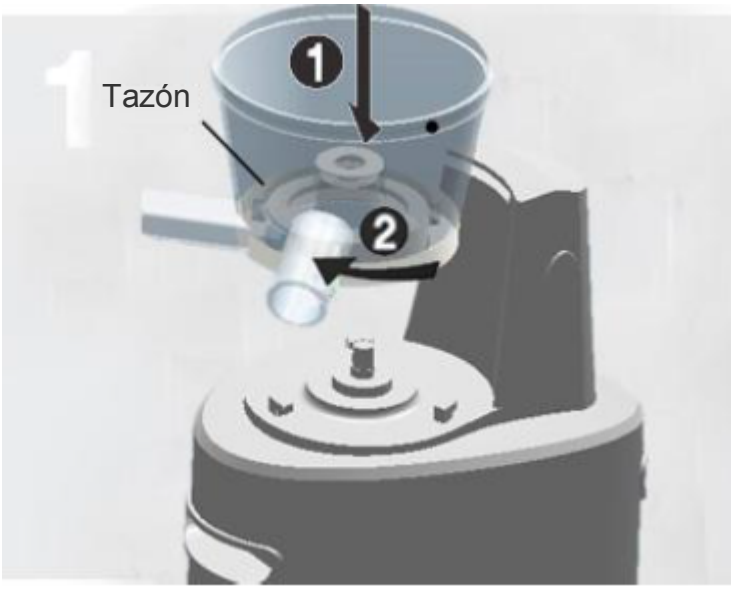

1. Ensamble el tazón a la base.
(1) Asegúrese de que el tazón esté bien ajustado al eje de la base.
(2) Gire el tazón para cerrar.

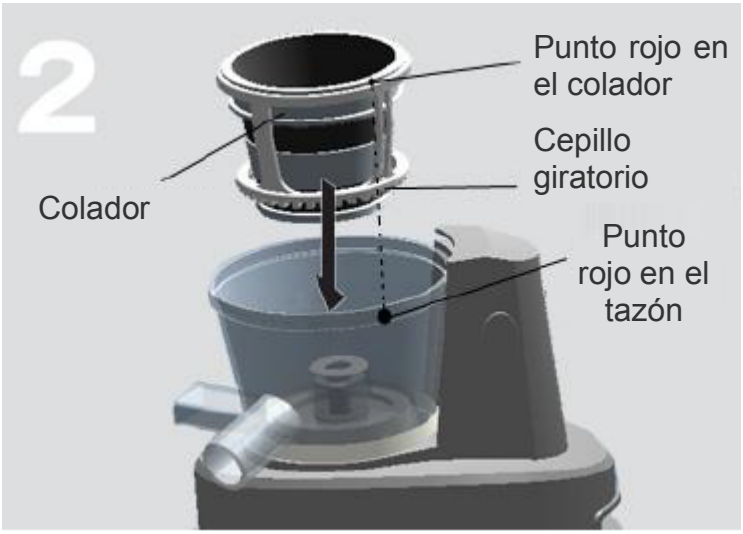

2. Ensamble el colador y el cepillo giratorio en el tazón.
(1) Asegúrese de que el punto rojo y la flecha negra estén alineados.

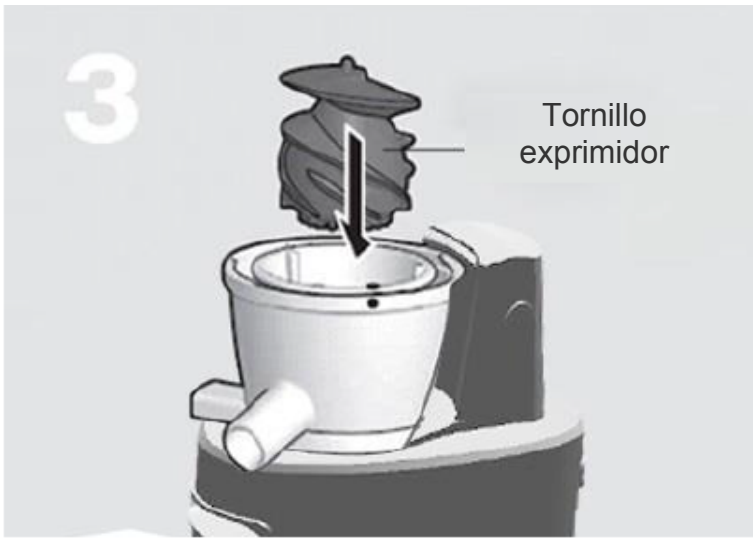

3. Coloque el tornillo exprimidor en el centro del tazón.

4. Ensamble la tolva en el tazón.
(1) Asegúrese de que el tazón en la tolva y el punto rojo en el tazón estén alineados.

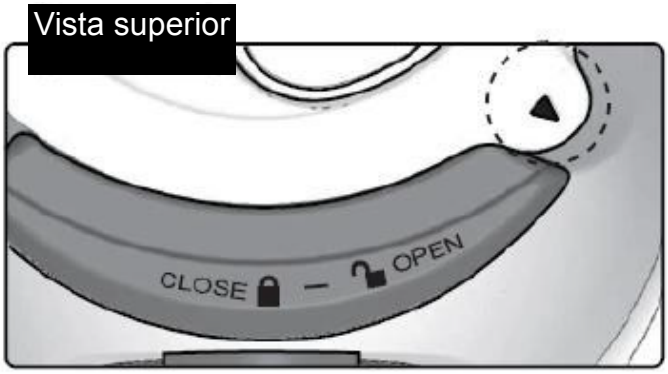

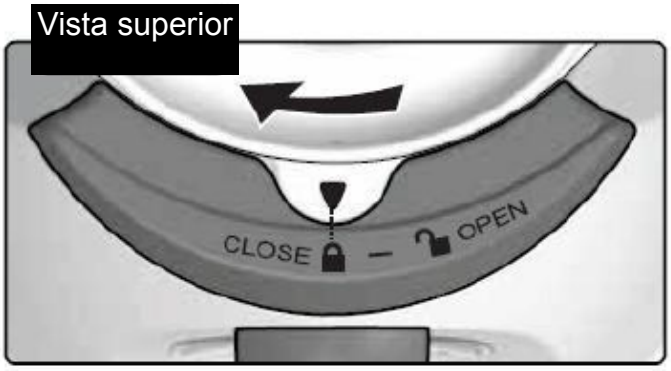

(2) Asegúrese de que la flecha en la tolva esté apuntando al signo de “cerrado” en la base.

INSTRUCCIONES DE OPERACIÓN

El extractor tiene tres posiciones:

"On" enciende el motor y comienza el proceso de extracción de jugo.
"Rev" función reversa. Utilice la únicamente cuando las frutas atascan el extractor, y necesita desatorarlo.
"Off" es la posición del centro y apaga el extractor.

Coloque los alimentos que desea procesar en la tolva. Se recomienda colocarlos en pedazos pequeños. Cuanta más agua tenga la fruta, más jugo obtendrá. Apague y desconecte el extractor después de utilizarlo. Lávelo completamente.

Nota

- No utilice el extractor por más de 10 minutos seguidos.
- Utilice únicamente el empujador que viene con el extractor para ayudarse a introducir los alimentos; no utilice otro tipo de artefactos.
- Retire las semillas duras de los alimentos antes de colocarlos en el extractor.
- No opere el extractor con las manos mojadas.
- Utilice la función de reverso únicamente cuando las frutas atascan el extractor. Si después de utilizar esta función el extractor continúa atascado, apáguelo, desármelo, límpielo, y vuélvalo a armar.

DESMONTAJE Y LIMPIEZA

1. Apague el extractor.
2. Gire la tolva para soltarla. Asegúrese de que la flecha está alineada con el signo "abierto" antes de halar el tazón.
3. Observe el orden de desmontaje.
4. Utilice el cepillo para limpiar completamente el extractor. No utilice esponjas metálicas.
5. No sumerja la base en agua u otros líquidos. Utilice una prenda húmeda para limpiarla.
6. Seque todos los accesorios después de limpiarlos.

ESPECIFICACIONES

Voltaje	AC 110V/60Hz
Potencia	150 vatios

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL

ULTRA JUICER

ED-5205SJ

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

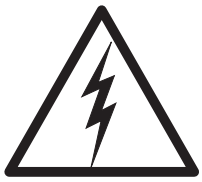

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

The Slow Juicer is a completely different mechanism where fresh juice comes from squeezing rather than grinding. Slow Juicer is a newly developed product, which is capable of making soy milk, vegetable extracting, fresh squeezed fruit juice, etc.
Low Speed Technology System squeezes instead of grinding which allows the juice to maintain it's pure color, natural taste, nutrients and vitamins.
For better use and maintenance of the product please follow the instructions carefully.
Please refer the user's guide when you are having technical difficulties or unsure of the usage of this product. We are not liable for any damages or injuries that may occur due to the lack of understanding of the user's guide.

Attachment Listing

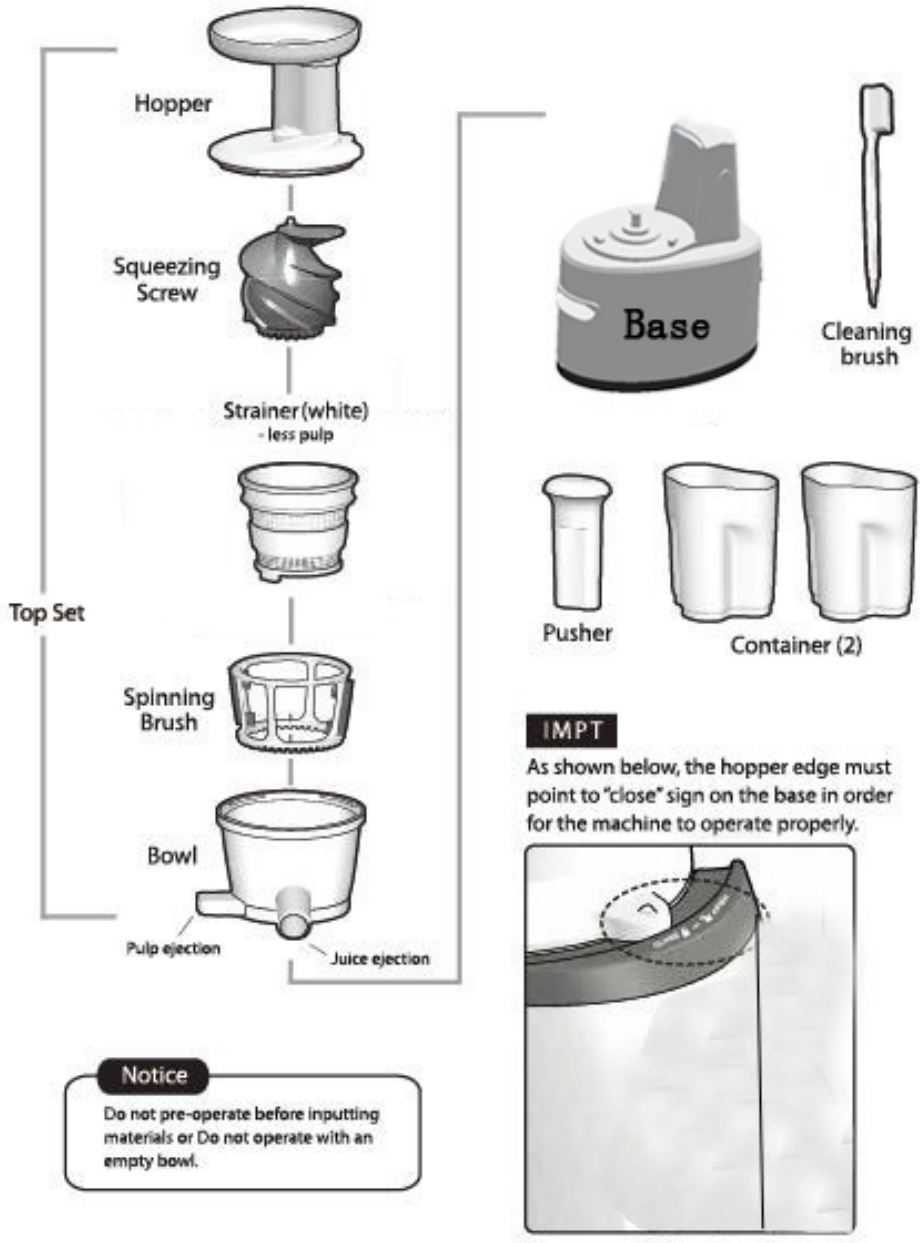

Safety Precautions

- Please read carefully before using.
- Please follow instruction to avoid injuries.

Warning

- Do not plug or unplug the electrical plug with wet hands.
- Please plug in your outlet properly
- Do not force plug into outlet, ensure plug is away from any heat source and is not bent or, twisted in anyway.
- Do not disassemble the base. Please consult with repair technician for trouble shooting.
- Stop use when the electrical cord is damaged or loose.
- Do not put any unknown substance into the machine.
- Keep the base dried at all time.
- Keep away from children or personnel who aren't familiar with the usage of this product.
- Do not disassemble any parts while operating the machine. Do not put in any unknown objects while operating the machine.

Caution

- Do not operate when the hopper is loose.
- Do not unplug the outlet when there is a gas exposure, instead open all windows for air ventilation.
- Operate on a flat and steady surface.
- Do not put in any objects that are not instructed inside the machine.
- Do not remove while operating.
- Should the squeezing screw jam, put in reverse for 2-3 seconds then try operating again.
- Do not disassemble while operating.
- Do not use anything other than the pusher.
- Do not use more than 10 minutes continuously. It will overheat the motor.
- Do not submerse the motor in water.
- After use, remove the plug from the outlet. Do not use cord to remove plug.
- While using, if there is any unusual odor (heat, smoke) stop use immediately and contact the nearest retail center where you purchased the product.
- Please lift the unit with two hands.

Assembly instruction

1. Assemble the bowl on the base.
   ① Make sure the bowl is all the way into the shaft of the base.
   ② Twist the bowl to close.

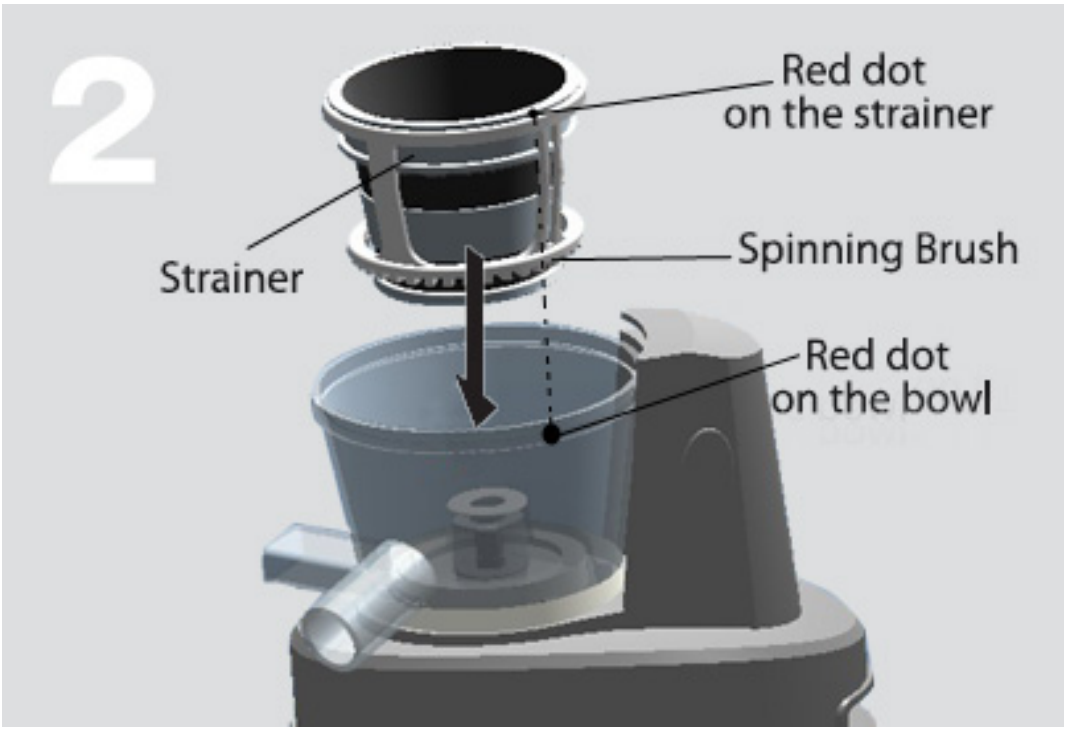

2. Assemble the stainer+spinning brush into the bowl.

① Make sure the red dot and the black arrow is aligned.

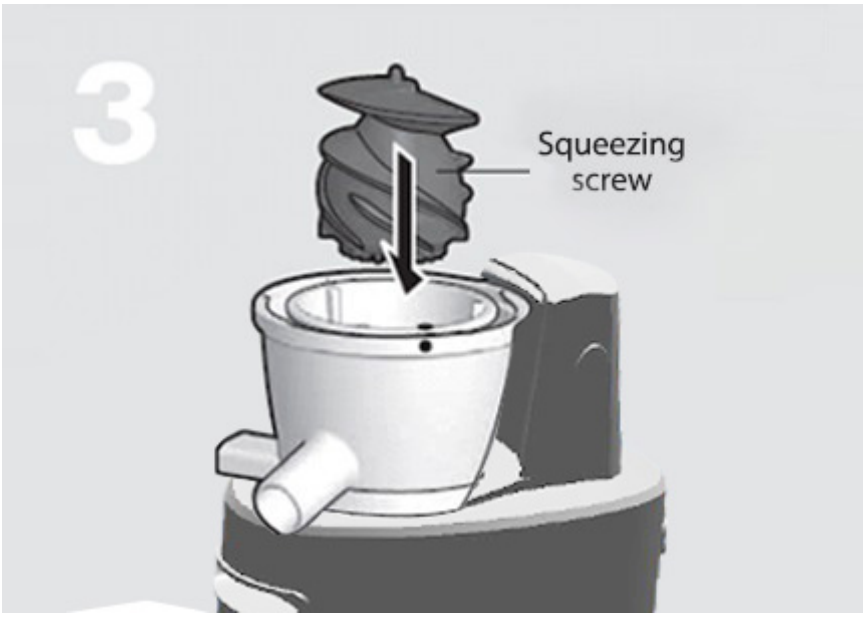

3. Place the squeezing screw in the center of the bowl.

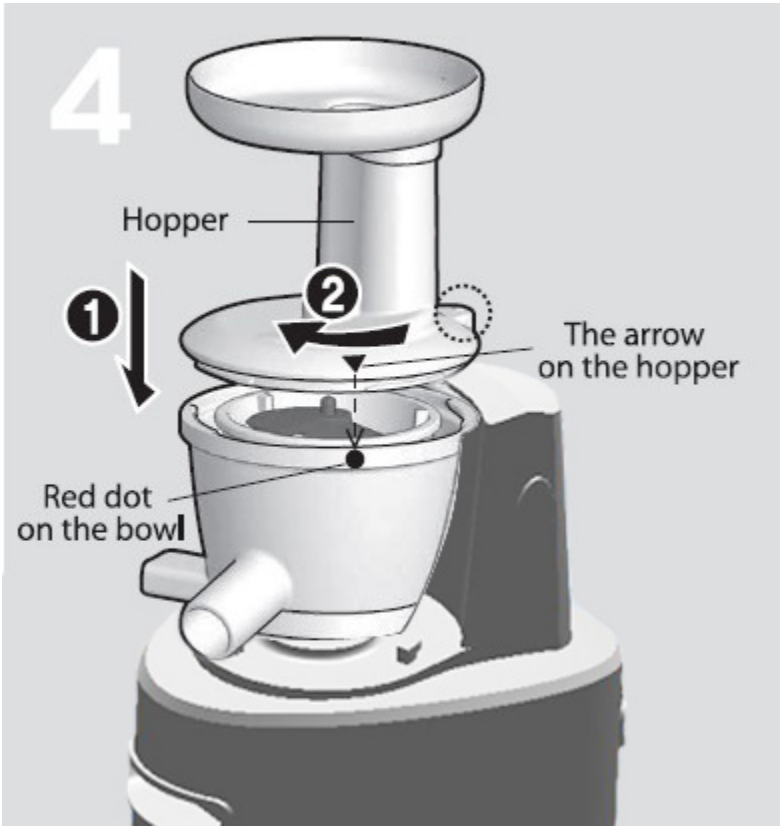

4. Assemble the hopper onto the bowl.

① Make sure the arrow on the hopper and the red dot on the bowl is aligned.

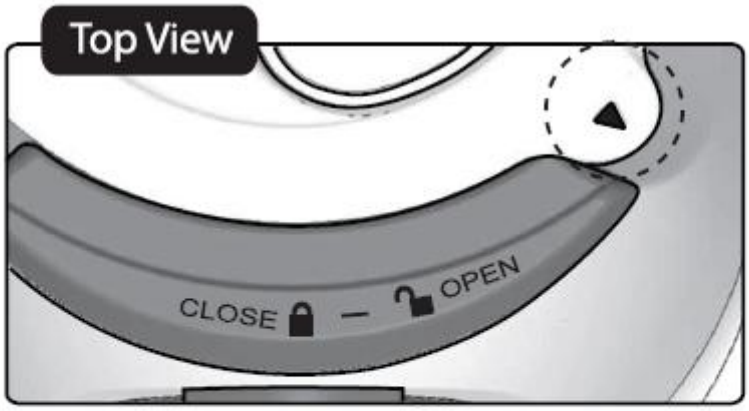

② Make sure the arrow on the hopper is pointing to closed sign on the base.

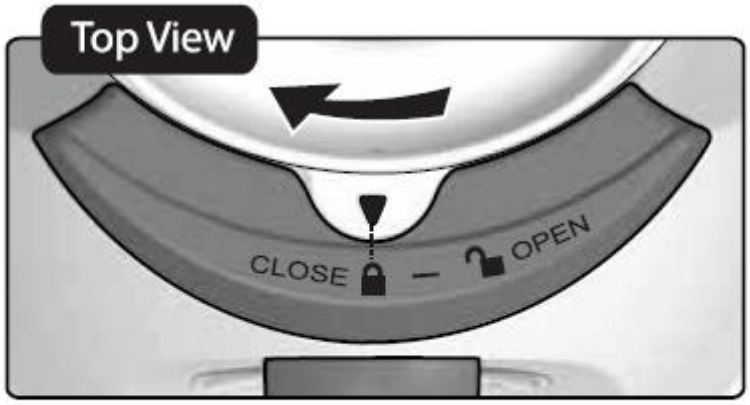

Reverse the step carefully when disassembling.

How to use slow juicer

1. The machine has three settings.

·"ON" starts motor, Start making juice.
·"Rev" is reverse. Only use when something is stuck and you need to unclog.
·"OFF" is at the center position. This allow the machine to turn off.

2. Please rinse everything thoroughly before putting into the machine.

After rinsing, put material into the machine using the pusher.
Please remove any hard seeds before using.

3. Turn off the machine after using.

   Please dry your hands before touching the power switch.
   Warning:
   Any unused juice should be refrigerated.
   Do not operate with wet hands.
   Do not pre-operate before inputting materials or do not operate with an empty bowl.

Warning while operating

- Do not use longer than 10 minutes at a time.
- Do not use anything as a pusher (fork, chopsticks, spoons, etc) other than the pusher itself.
- Remove any hard seeds.
- Do not operate with wet hands.

When the machine is stuck and not operable, please turn off the machine and put it reverse for few seconds then try operating again.
When reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassemble, please try turning on the machine.

How to disassemble and clean

1. Turn machine “OFF”.
2. Twist the hopper to unlock by grabbing the two ejections. Make sure the arrow is aligned with the open sign before pulling off the bowl.
3. Order to disassemble

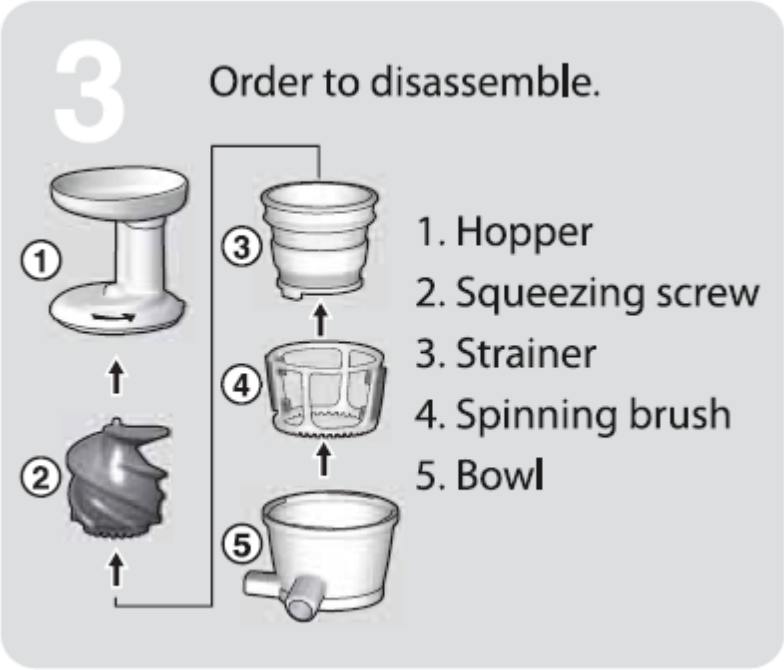

4. Use the brush to clean thoroughly after operating.

   Do not use metal sponge to clean, it will damage the machine.
   Do not use dishwasher to clean.
5. Do not rinse the base with direct water, use day towel or wet towel to clean.
6. Please dry the attachments after cleaning.

Voltage : AC110V/60Hz

Power : 150W